 


PERCo SOFTWARE

PERCo IP-Stiles, based on a tripod turnstile, box tripod turnstile or a waist-high rotor turnstile can be operated:

- by SL-01 software (basic single-user software supplied with a standard delivery set)
- by SL-02 software (software with video verification, optional)
- through a web-interface (free of charge).

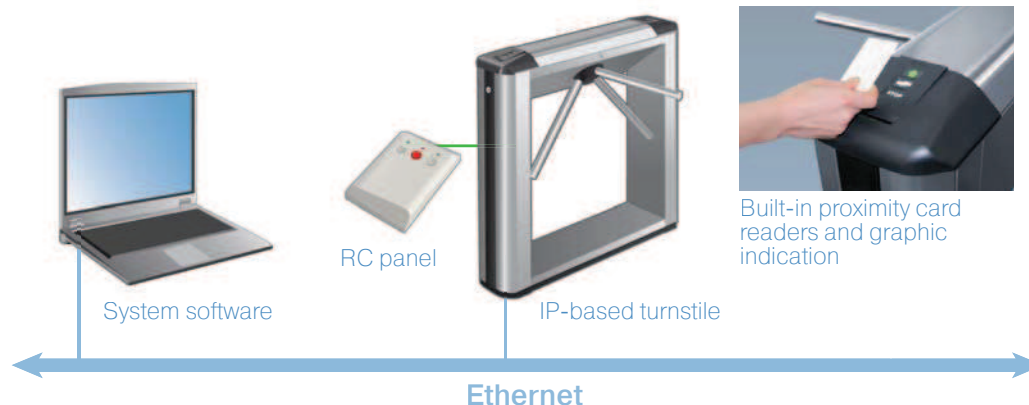

SL-01 software

SL-01 is basic software supplied in a standard delivery set with all IP-Stiles, allowing for basic functions such as:

- administration of employee lists (full names);
- issue of access cards;
- access rights assignment under authorized/non-authorized principle;
- setting and change of access modes;
- hardware configuration;
- database event logging with data exportable, e.g. to an Excel file.

PERCo-SL01, version 5.1.1.2

File View Edit Access Settings Help

Employees Configuration Events Verification

Events from 10.02.2009 until 12.03.2009

Date	Time	Device	Event	Facility Code	Number	Full Name
12.03.2009	15:17:36	Reader 1	Refusal to access	1	31	Kevin Johnson
12.03.2009	15:17:08	Reader 1	Refusal to access	1	33	Samanta Johnson
12.03.2009	09:48:03	Controller	Device sound is OFF			
12.03.2009	09:48:28	Controller	Connection reactivation			
12.03.2009	09:48:26	Controller	Controller restart (WatchDog)			
12.03.2009	09:48:00	Controller	Power recovery			
12.03.2009	09:48:00	Controller	Power-up			
11.03.2009	10:56:45	Controller	Power-down			
11.03.2009	10:56:07	Controller	Device sound is OFF			
11.03.2009	10:56:05	Controller	Connection reactivation			
11.03.2009	10:56:03	Controller	Controller restart (WatchDog)			
11.03.2009	10:46:20	Controller	Device sound is OFF			
11.03.2009	10:45:14	Controller	Connection reactivation			
11.03.2009	10:45:12	Controller	Controller restart (WatchDog)			
11.03.2009	10:38:25	Controller	Connection reactivation			
11.03.2009	10:37:39	Controller	Controller restart (WatchDog)			
11.03.2009	10:34:54	Controller	Device sound is OFF			
11.03.2009	10:34:50	Controller	Power-up			

Controller Controller Access Control

IP address 10.0.1.60 Subnet mask 255.0.0.0 Gateway 0.0.0 MAC-address 00:0b:3c:00:6a:f8

Screenshot of an employee list

 
SL-02 software

SL-02 software with video identification enables to prevent unauthorized use of valid ID cards that have been lost, stolen or otherwise improperly obtained. The entrant's face can be checked against the card holder's photo from the database which appears on the screen

when the card is presented.

Additionally to the functions provided by the SL-01 basic software, SL-02 allows for:

- real-time capture of dynamic video image;
- employee and visitor identification and verification by means of photo and video frame images.

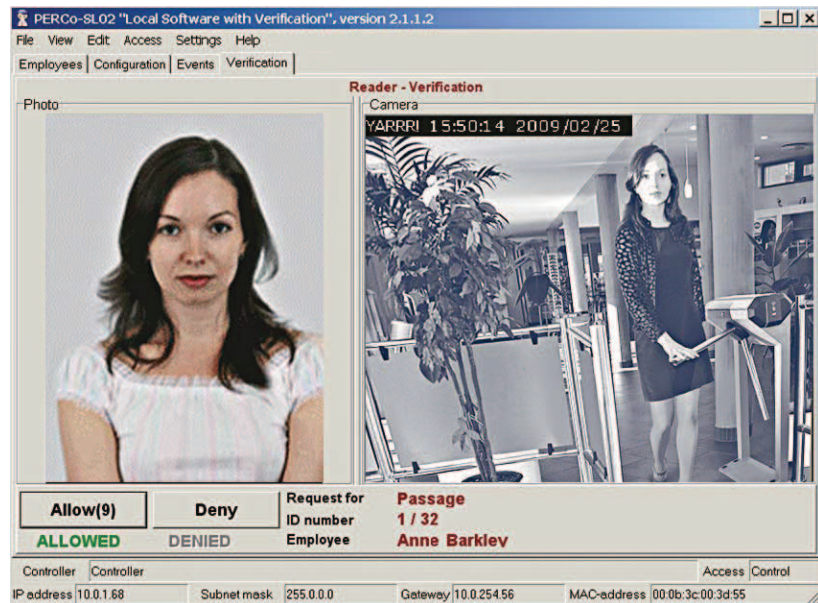


Sample screenshot of video identification

Web-interface

Web-interface allows for operation of the IP-Stiles remotely without installation of any software. For an access to the web-based interface of a controller, the IP-address of the controller should be input in an URL bar of a browser. Access is protected with a password.

Using the web-based interface enables you to:

 - run a test and do settings of all controllers;
- view the event log of a selected controller, track number of passed cards as well as time of passes;
- load, view and revise lists of cards.

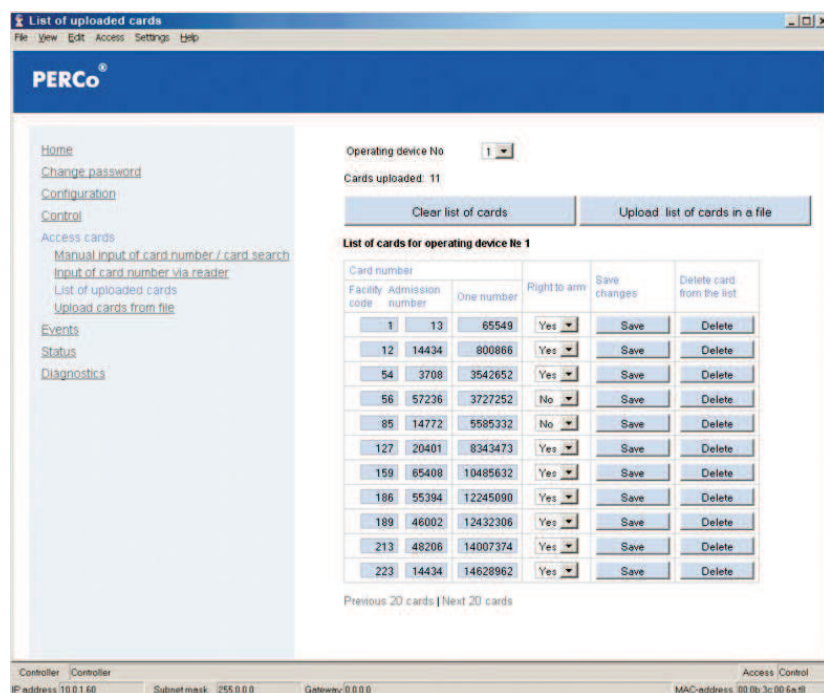

Screenshot of web-interface